

**SMARTBOX<sup>®</sup> MOUNTING BRACKET INSTALLATION INSTRUCTIONS**  
**AGCO<sup>™</sup> White Planters<sup>®</sup> 9000 Series - Rear Mount**  
Bracket Part No. SB021532 – *for use with 2 bushel seed boxes*



**Safety:** The instructions below use the word “Warning” to indicate the following:

**Warning:** Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury.


**Installation:** Prior to installation, unfold planter and leave the planter row units in the raised position.

**Warning:** Always use cylinder locks when working on the planter in a raised position!




See the attached Drawing No. SB021532 and the AMVAC SmartBox System Parts and Operator's Manual for additional installation information.

- A. Start by attaching Item Nos. 13 and 14 (*PLT; ANGLE, RH & LH*) to the seed box's front, cast iron mounting location using the Item Nos. 4, 9 and 16 (*bolt, washer, nut*) hardware provided. As shown on the photo below, the thick washer serves as a spacer shim.

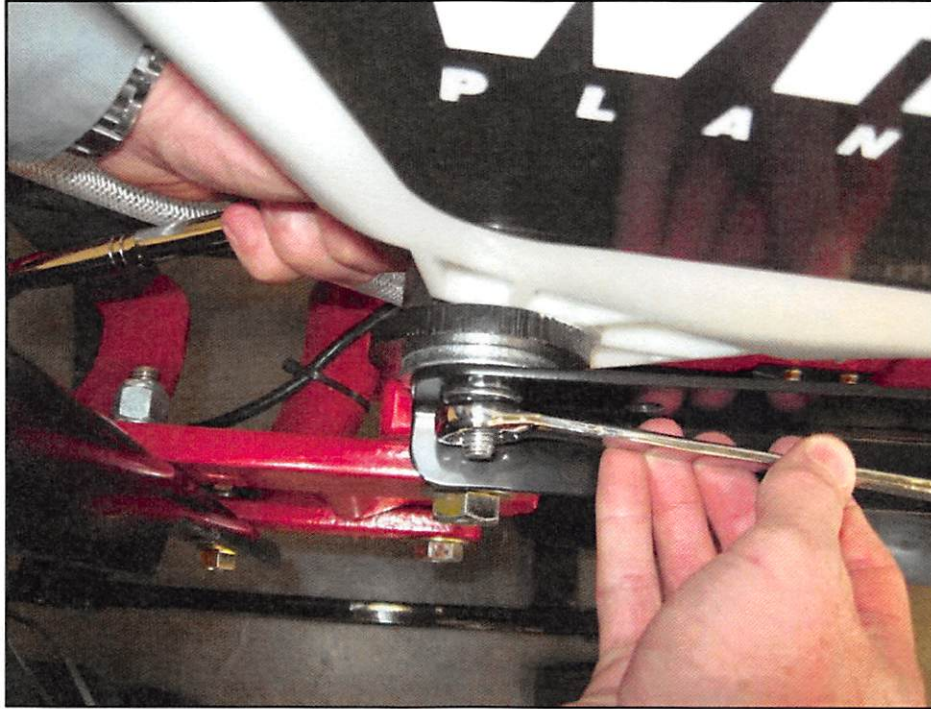

- B. Remove the row unit's closing wheel assembly's pivot bolt on one side of the planter. Use this same bolt to install Item No. 15 (*WELDMENT; TUBE BRACE*). Repeat this process on the opposite side of the row unit.

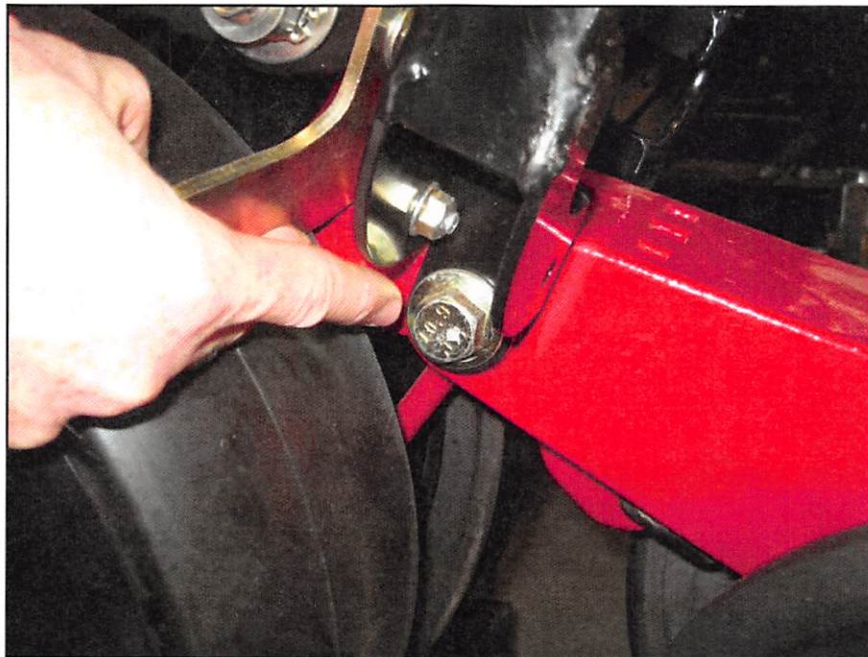



C. Next, fit Item No. 11 (*PLT; SB, BASE*) over the left and right Angle Plates and Tube Braces. Align the front two (2) bolt Base Plates holes with the rearward (2) bolt holes of the Angle Plates. The Tube Braces will be aligned with the center holes of the left and right Angle Plates. Fasten using Item Nos. 3 and 7 (*bolts and locknuts*).

**NOTE:** *The third set of holes on the rear of the Base Plate will not be used.*



D. The SmartBox Cradle will be then hooked into the rear of the Base Plate and secured with four bolts and locknuts provided with the SmartBox Row Unit's hardware. Refer to the *AMVAC SmartBox System Parts and Operator's Manual* regarding the installation of the remainder of the system.

